

Installation Guide



Universal Interface Panel IFP-502-A


CAUTION

- Make sure the positive (+) and negative (-) terminals are in their correct order before connecting the power source.
- Be sure that the unit is at OFF mode before turning ON the main power source.


User Operation Guide

Installation Guide

Connecting to Computer and AV Equipment

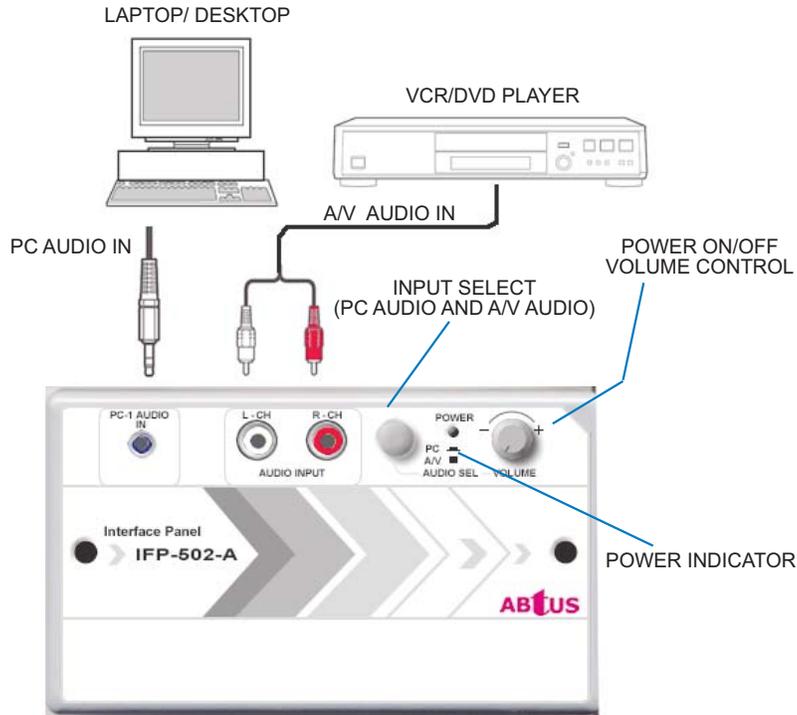

* Wiring configuration and connection to Audio and Video equipments.

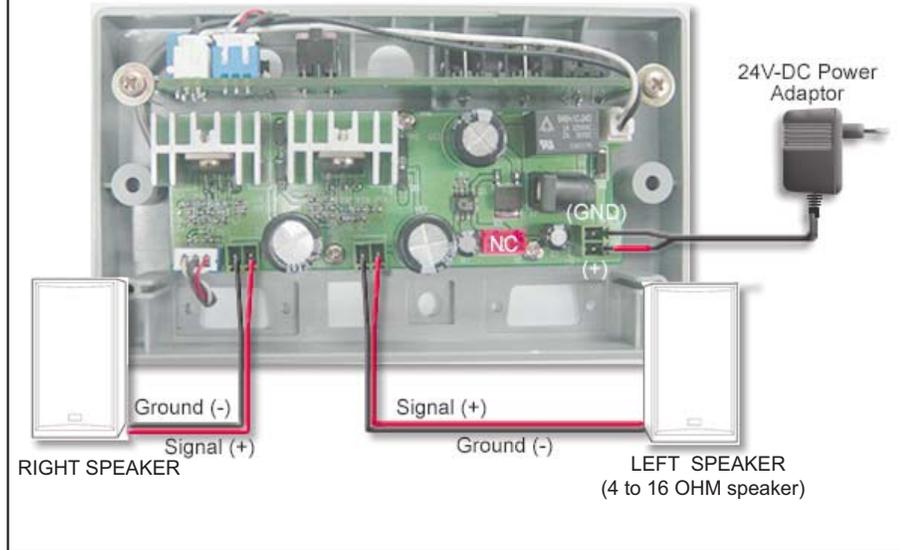

Input Terminal

- 1 x PC Audio
- 1 x A/V Audio
- 1 x 3.8mm connector (DC Power IN)

Output Terminal

- 1 x Stereo Speaker out 3.8mm screw type

Dimensions (LxWxH)

149 x 88 x 31mm

* Specifications are subject to changes without notification